

Reversing the door FK 180

If reversing the door with the unit in normal position, then it is recommended to be two people. Else the unit can be placed on its back on the floor. If this method is used the unit must be placed in normal upright position at least two hours before connecting to power.


Extension cords terminal block and left bracket is optional. Request a spare parts list



1. Disconnect the power supply
Loosen the two screws in the top panel.
Pull out carefully the top panel.




2. Unscrew the two screws in the lower panel.

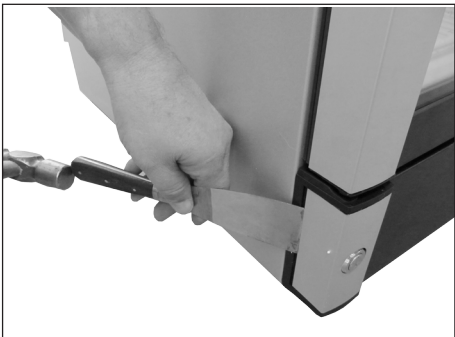


3. Remove the cover by using suitable tool and a hammer




4. Remove the lower panel by use of a suitable tool.
Place the lower panel in front of the unit without pulling in the wires

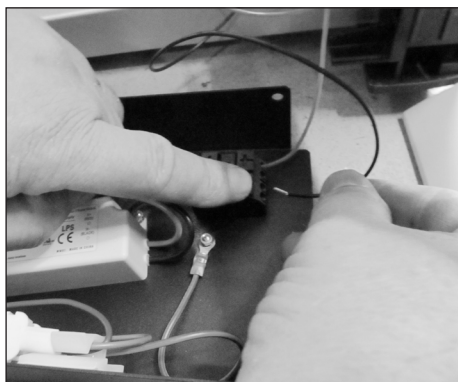


5. Remove the black and red wire from the connector by pressing down the clips.

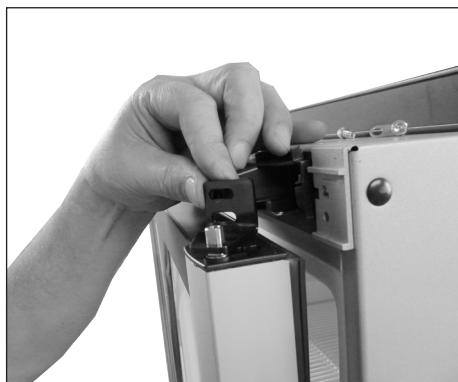

6. Unscrew the bracket in the top.
NOTE: The door is now loose!
Be careful that the door does not fall down!

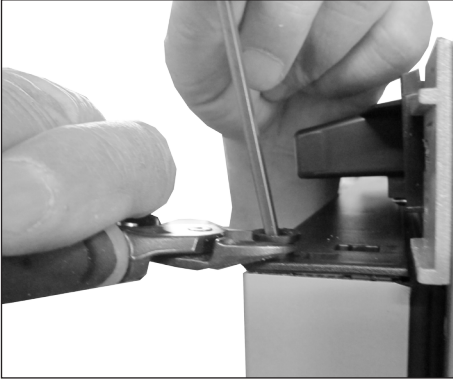


7. Remove the bush and door closer by use of a pincher. Place the bush in the opposite side of the door. Do not place the door closer yet.

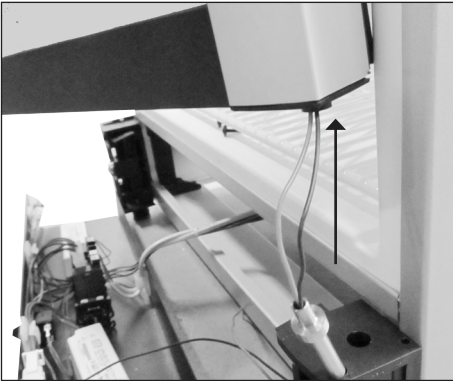

8. Lift up the door. The wires from the door are pulled up together with the door pin. Place the door pin in the opposite side of the cabinet.



9. Rotate the door 180 degrees. Place the door, with the front facing down, on a soft surface. Remove the gasket in the left side and pull out the wires for the door light.

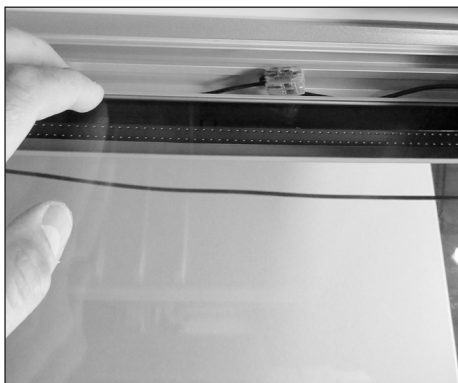

OBS: Extension cords, terminal block and left bracket is optional


10. Extension cords mounted using the terminal block
Push the wires through the hole and pull out 65cm
11. Mount the gasket again




12. Lift up the sliding part and move it to the opposite side




13. Unscrew the locking pin.
Pull the lock out.
Refit both parts on the opposite side.

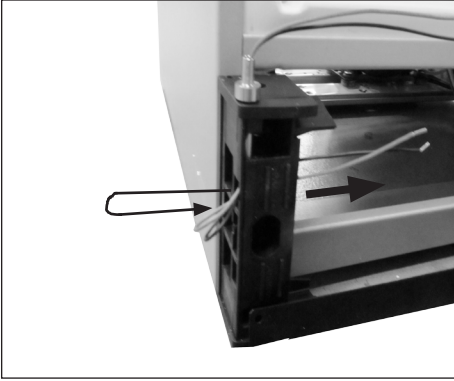


14. Push the wires from the door down into the door pin and drag them through the door support.

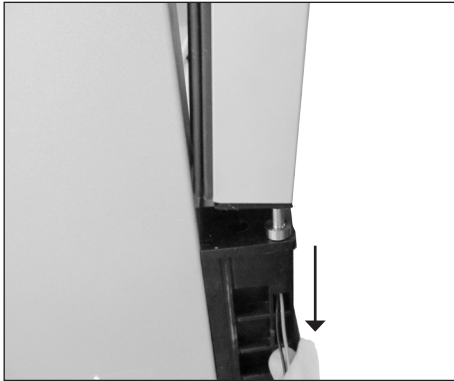


15. Mount the door on the top of the door pin and at the same time draw the wires gently down so that they are not pinched. Press the door completely down over the door pin!

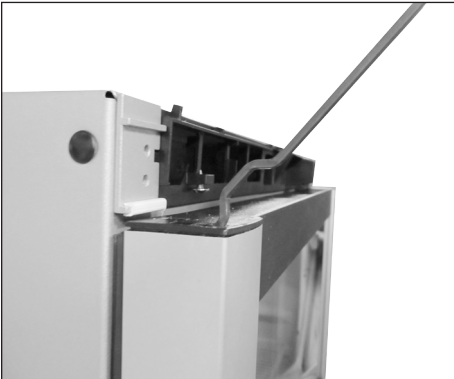

16. Put the door closer back in the door in the opposite side. The door closer must be positioned as shown in the picture.

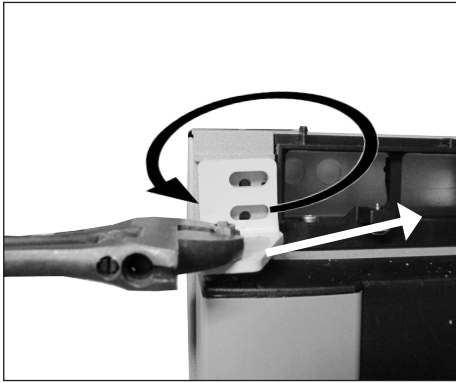

17. Place the left hinge on the top of the door closer.
Twist the hinge (a quarter turn) in place with a wrench and tighten it with the two screws.
The door is now fixed again.

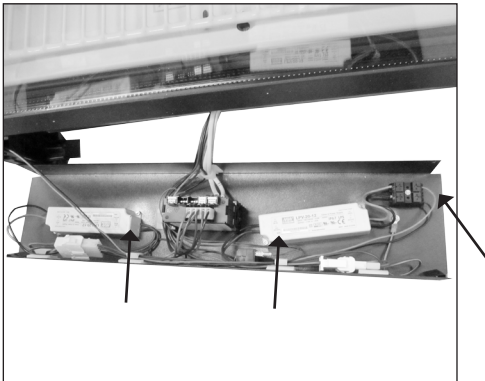

18. Click the wires to the door light onto the wire retainers and mount them in the connector.

19. Mount the lower panel and top panel.

If the unit has been laid down, it must stand upright for at least 2 hours before reconnecting to power.

Dørvendings vejledning FK 180

Det anbefales at lægge skabet ned på ryggen. Hvis denne metode anvendes, skal skabet placeres i normal oprejst position i mindst to timer, før tilslutning til strøm.

Hvis du ønsker at vende døren når skabet står i normal oprejst position, anbefales det at være to personer.

OBS: Forlængerledninger, treminalblok og venstre beslag er ekstra tilbehør.

Rekvirer en reservedels liste.



1.

Afbryd strømmen.


De to skruer i det øverste panel løsnes.

(Skal *kun* løsnes)

Træk forsigtigt panelet ud, uden at trække i ledningerne.



2. Fjern de to skruer i fodpanelet.

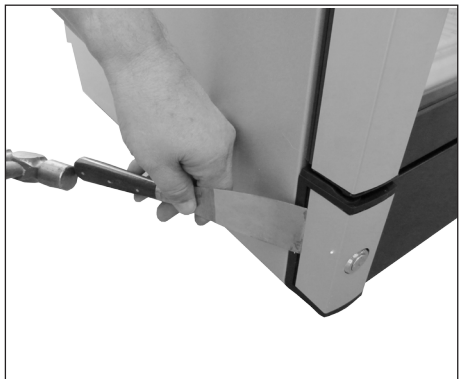


3. De to afdækninger, løsnes ved hjælp af et egnet værktøj og evt. en hammer.




4. Fodpanelet løsnes ved hjælp af et egnet værktøj.

Læg fodpanelet ned foran skabet, uden at trække i ledningerne

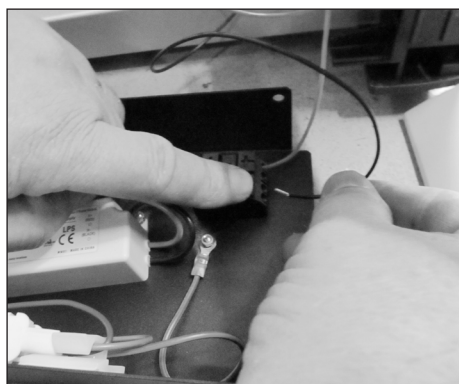


5. Den sorte og røde ledning fjernes fra samledåsen, ved at presse klemmerne ned.

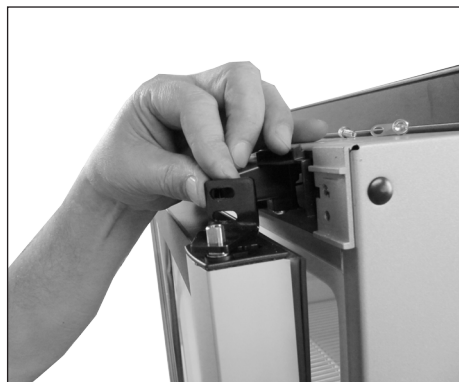

6. Beslaget skrues af, i toppen af skabet.

OBS: Døren er nu løs!


Pas på at døren ikke falder ned!

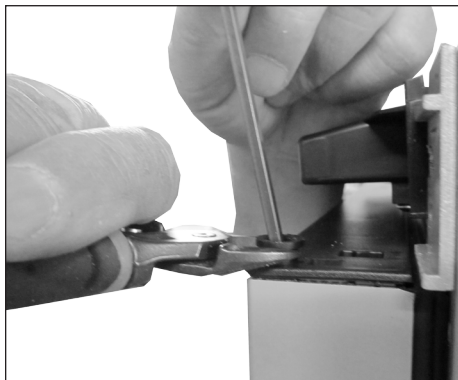

7. Bøsning og dørlukker løsnes ved hjælp af en tang.

Sæt bøsningen på i modsatte side.

Vent med at monter dørlukkeren.

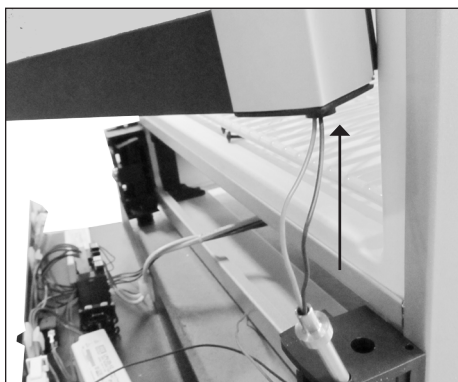


8. Løft døren af. Træk samtidig forsigtig ledningerne til døren op af dørtappen.

Flyt dørtappen over i modsatte side.



9. Drej døren 180 gr. og læg den med indvendig side opad, på et blødt underlag.

Træk tætningslisten af i venstre side og træk ledningerne til dørlýset fri.

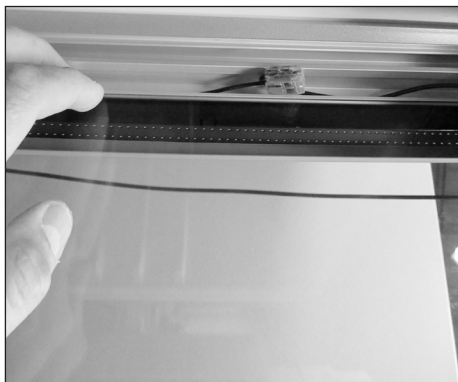

OBS: Forlængerledninger, terminalblok og venstre beslag er ekstra tilbehør

10. Forlængerledningerne monteres ved hjælp af terminalblokken
Træk ca. 65cm af ledningerne igennem hullet i dørprofilet.



11. Montere tætningslisten igen




12. Løft glideskoen af og monter den igen i modsatte side.




13. Skru låsepinden af.
Træk låsen ud.
Monter begge dele igen i modsatte side.

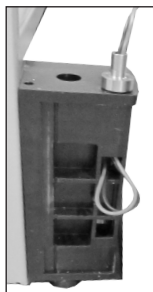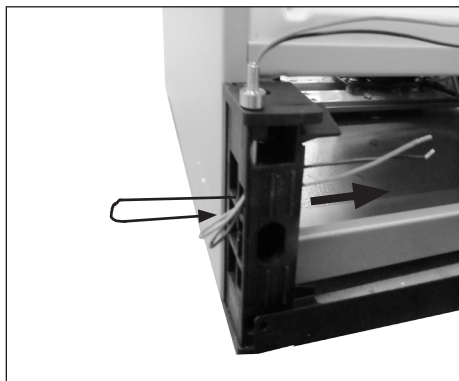


14. Skub ledningerne fra døren ned igennem dørtappen og ud igennem dørsøjlen.

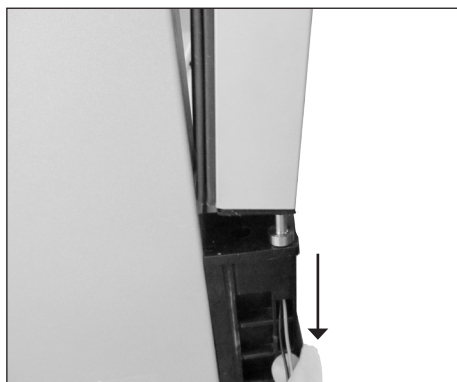

15. Monter døren på dørtappen. Træk samtidig forsigtig ned i ledningerne, så de ikke kommer i klemme. Pres døren helt ned over tappen!

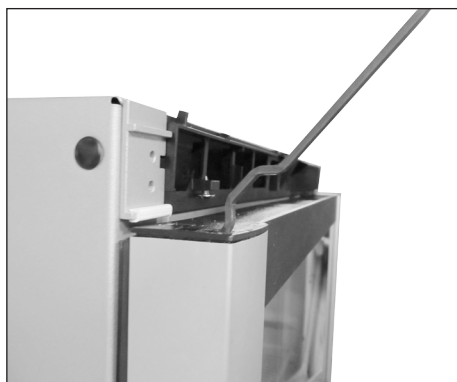


16. Monter dørlukkeren igen. Dørlukkeren skal monteres som vist på billedet.

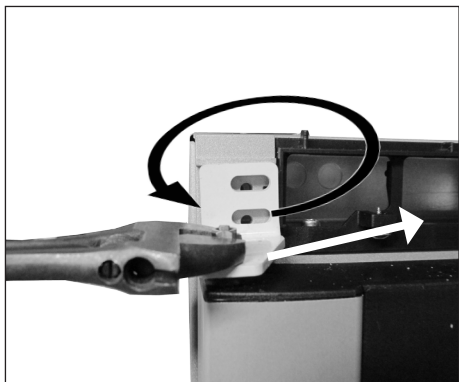

17. Placer venstre dørhængslet på dørlukeren.

Drej dørhængslet en kvart omgang med en nøgle, og skru hængslet omhyggeligt fast.

Døren er nu fastgjort igen.

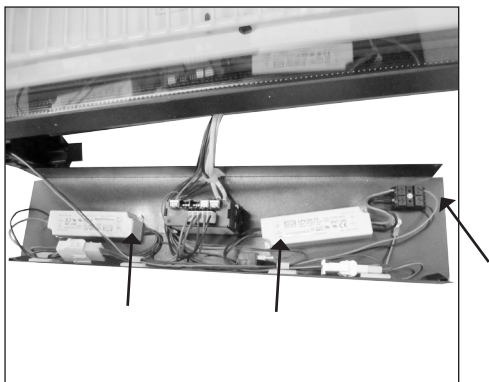

18. Monter ledningerne i ledningsholderene og sæt ledningerne fast i samledåsen.

19. Montér fodpanelet og toppanelet igen.
OBS: Hvis skabet har været lagt ned, skal der gå mindst 2 timer, inden det må tilsluttes strøm.