

For the washer:

I believe the washer is set as remote pay. This can be turned off in Pricing Menu, Payment Mode should be set as NO ... not sure if you know how to get in, difficult to explain, starts as of page 16 in the manual




1. Press the left hidden and F button at the same time



2. Release the Left hidden button, and after 1 second release the F button... if correct, you should see Service Info... if you don't see that, you have to start over again.
3. Now **quickly** press the 2 hidden buttons at the same time.  
If you press too long, the screen will return back to the cycles and you have to start over again.  
If the screen remains at Service Info, you have to push again quickly to the 2 hidden buttons.  
You might have to do that few times



4. When all OK, the below screen will appear.

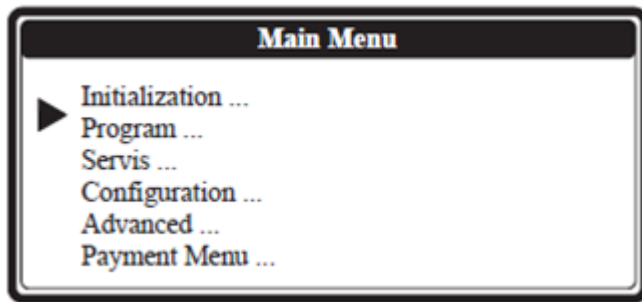

5. With the UP/DOWN arrows, select Payment menu, press V  
payment mode, Press V  
with the hidden buttons, select NO
6. With the Down arrow, you have to scroll completely down to EXIT, and press V
7. The Main menu will pop-up again, and now press F and you should come back to the cycles.