

bruksanvisning/ user manual



FB 1100-1 A+

Cylinda
år efter år

VARNING!

För att försäkra dig om en normal drift av din frysbox, som innehåller ett miljövänligt köldmedel R600a (endast brandfarligt under vissa förhållanden) måste du beakta följande regler:

- ♦ Förhindra inte att luften cirkulerar fritt runt frysboxens yttre sidor.
- ♦ Använd inte vassa verktyg för att snabba på avfrostningsprocessen, förutom det som rekommenderas av tillverkaren.
- ♦ Skada inte kylslangan i kylsystemet.
- ♦ Använd inte elektriska apparater inuti frysboxens innerutrymme, förutom de som rekommenderas av tillverkaren.

SV

Innehåll

Råd vid återvinning av din gamla enhet /1

Återvinning av förpackningsmaterial /2

Transportinstruktioner /2

Varningar och speciella råd /2

Installera /3

Elektrisk anslutning /3

Stänga av /4

Drift /4

Enhetsbeskrivning /4


Frysboxens funktioner /4

Råd vid förvarning av mat /5

Avfrostning av enheten /6

Rengöring av enheten /6


Felsökningsguide /7

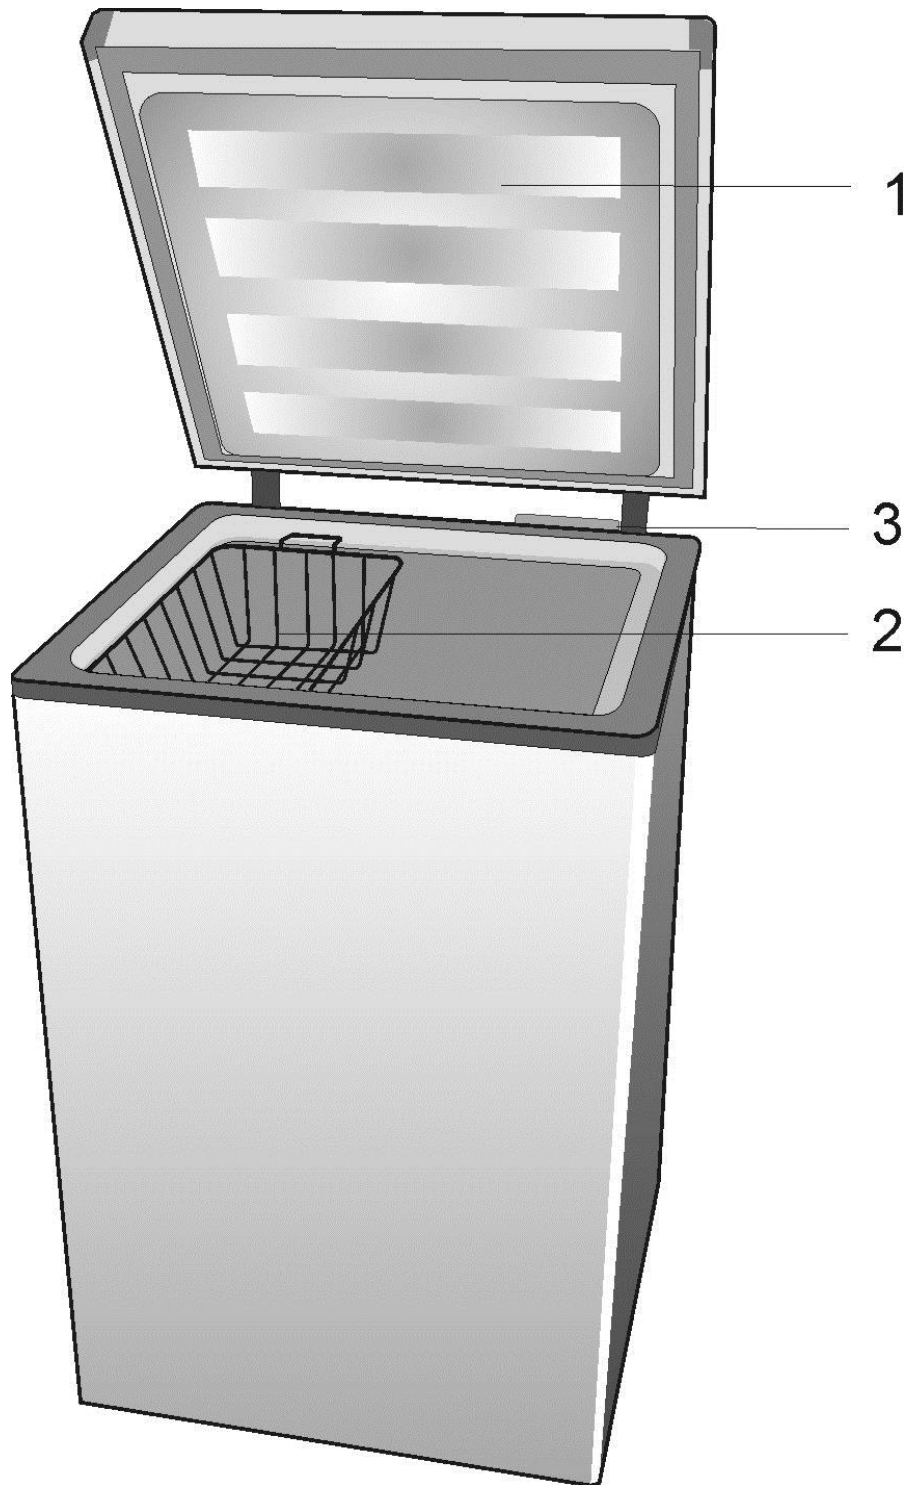


1

i Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.


i Bilder som förekommer i den här bruksanvisningen är exempel och överensstämmer inte exakt med din produkt. Om delar inte medföljer produkten du har köpt så gäller det för andra modeller.

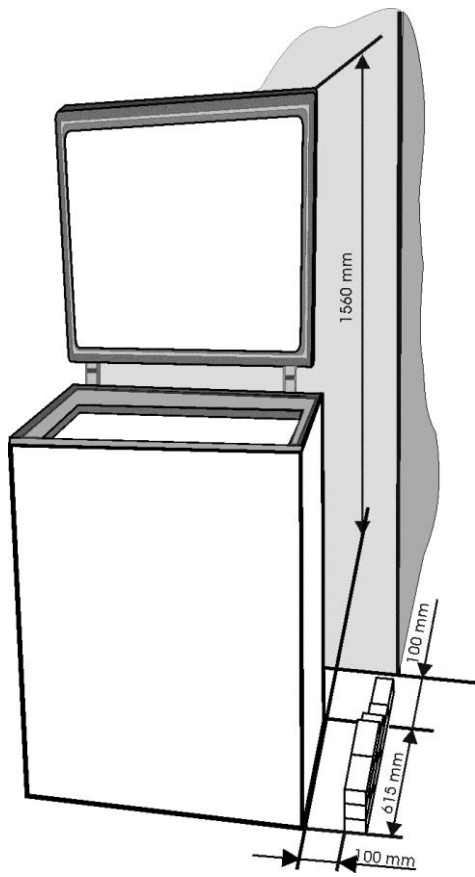


2

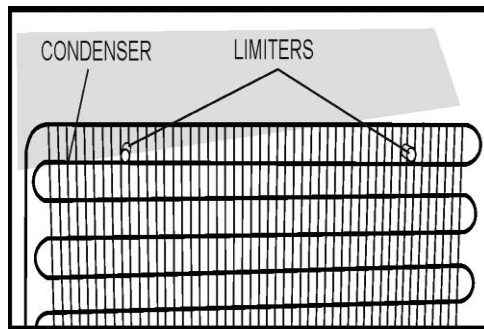

3

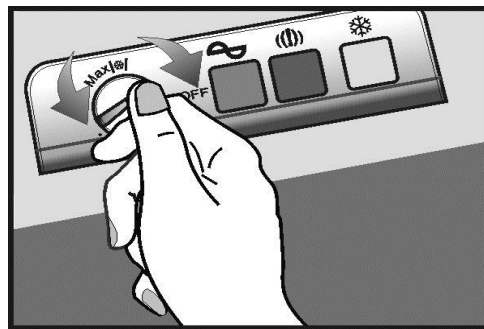

4

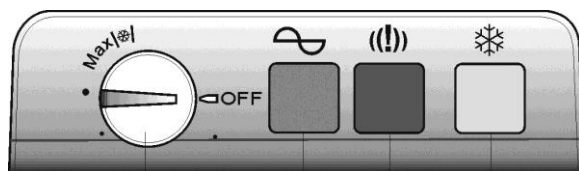

1

2

3

4

5

Grattis till ditt val!

Frysen som du har köpt är en **Cylinda**-produkt och representerar en harmonisk förening mellan kylningsteknik med ett estetisk synsätt. Den har en ny och attraktiv design och är byggd enligt europeisk och nationell standard, vilket garanterar drifts- och säkerhetsfunktionerna. Samtidigt är det kylmedel som används R600a, miljövänligt och påverkar inte ozonlagret.

För att kunna använda din frys på bästa sätt råder vi dig att noggrant läsa igenom informationen i användarinstruktionerna.

Råd vid återvinning av din gamla enhet

Om din nyligen inköpta enhet ersätter en äldre, måste du överväga några saker.

Den gamla enheten är inte värdelöst skräp. Återvinning, samtidigt som man bevarar miljön, gör det möjligt att ta vara på viktiga råmaterial.

Gör din gamla enhet oanvändbar:

- koppla från enheten från strömförsörjningen;
- ta bort strömkabeln (klipp av den);
- ta bort eventuella lås på dörren för att undvika att barn stängs inne vid lek eftersom det kan hota deras liv.

Frysboxen innehåller isoleringsmaterial och köldmedel vilket kräver en korrekt återvinning.

Den här enheten är inte avsedd för användning av personer med nedsatt fysisk, känslomässig eller mental förmåga eller en person som saknar grundläggande kunskaper om hur den används om han eller hon inte får tillräckligt mycket övervakning eller anvisningar från en person som ansvarar för säkerheten. Yngre barn bör bevakas så att de inte leker med enheten.

Återvinning av förpackningsmaterial

VARNING!

Låt inte barn leka med emballaget eller delar av den. Det finns en kvävningsrisk med kartongdelar och plastfilm.

Frysboxen packeteras väl för att skyddas under transporten, så att den är oskadad vid leveransen. Allt förpackningsmaterial är miljöanpassat och går att återvinna. Vänligen hjälp oss att återvinna emballaget samtidigt som du skonar miljön!

VIKTIGT!

Innan frysboxen används bör du noggrant läsa igenom hela användarinstruktionen. De innehåller viktig information gällande installation, användning och underhåll av frysboxen.

Tillverkaren hålls inte ansvarig om informationen i denna instruktion inte efterföljs. Ha instruktionsboken på en säker plats för att lätt komma åt dem vid behov. Den kan också vara till nytta för flera användare.

OBSERVERA!

Denna frysbox får endast användas till det den är avsedd, hushållsbruk, installationen bör göras i torra skyddade utrymmen, ej i direkt solljus eller nära värmekällor.

VIKTIGT!

Om elkabeln är skadad måste den bytas av tillverkaren, tillverkarens servicetekniker eller motsvarande kvalificerad person, för att fara skall undvikas.

Transportinstruktioner

Enheten måste transporteras, så långt det är möjligt, endast i vertikalt läge. Säkerställ att produkten är väl emballerad vid transport. Om frysboxen placeras i horisontellt läge under transport (endast enligt markeringarna på paketeringen), bör enheten få vila under 4 timmar innan enheten används för att låta kylkretsen stabilisera sig.

Om dessa instruktioner inte efterföljs kan motorkompressorn gå sönder och därmed gäller inte garantin.

Varningar och speciella råd

- Sätt inte i frysboxens kontakt om något är fel.
- Reparationer får endast utföras av kvalificerad servicetekniker.
- I följande situationer, var vänlig dra ur enhetens kontakt:
 - när du avfrostar enheten helt;
 - när du rengör enheten.

När enhetens kabel dras ur skall du hålla i kontakten och inte i kabeln!

- Försäkra dig om tillräckligt utrymme finns mellan enheten och väggen där placerats.
- Klättra inte på enheten.
- Låt inte barn leka eller gömma sig inuti enheten.
- Använd aldrig någon elektrisk apparat inuti frysboxen för avfrostning.
- Använd inte enheten i närheten av värmeelement, spisar eller andra värme- och eldstäder.
- Lämna inte frysboxens dörr öppen längre än nödvändigt för att lägga in eller ta ur mat.
- Förvara inte mat i enheten om den inte fungerar.
- Förvara inga produkter innehållandes brännbara eller explosiva gaser inuti enheten.
- Förvara inga kolsyrade drycker (juice, mineralvatten, champagne etc.) i frysen. Flaskan kan explodera! Frys inte drycker i plastflaskor.
- Ät inte isbitar eller isglass direkt efter att du tagit ur dem ur frysen eftersom de kan orsaka "frysskador".
- Rör aldrig kalla metalldelar eller fryst mat med våta händer eftersom dina händer snabbt kan frysa på den väldigt kalla ytan.
- För att skydda frysboxen vid förvaring och transport levereras den med kilar mellan dörren och själva skåpenheten (främre och bakre sidan). De här kilarna avlägsnas innan du startar frysboxen.
- Överskott av is på ramen och korgarna skall skrapas av regelbundet med medföljande plastskrapa. Använd inga skarpa verktyg för att ta bort isen. Förekomst av is kan göra det omöjligt att stänga dörren korrekt.

● Om du inte använder din enhet under några dagar, bör den inte stängas av. Om du inte använder under en längre period, gör du enligt följande:

- koppla från enheten;
 - töm frysen;
 - avfrosta och rengör den;
 - låt dörren vara öppen för att undvika att otrevlig lukt bildas.
- Strömkabeln kan endast bytas ut av en auktoriserad person.

Installation

Produkten kan arbeta i omgivande temperaturer på -15°C till $+43^{\circ}\text{C}$. Om den omgivande temperaturen överstiger $+43^{\circ}\text{C}$, kan temperaturen inuti enheten öka.

- Installera enheten långt från värme- och brandkälla. Genom att placera den i ett varmt rum, utsätta den för solljus eller i närheten av en värmekälla (värmeelement, spisar, ugnar) ökar energiförbrukningen och produktens livslängd förkortas.
- Vänligen observera följande minimiavstånd:
 - 100 cm från spisar som eldas med ved eller pellets;
 - 150 cm från elektriska spisar och gasspisar.
- Försäkra dig om att luften cirkulerar fritt runt enheten genom att följa anvisningen om avstånden som visas i Bild 2. Installera medföljande inlägg på kondensatorn (på baksidan). (Bild 3).
- Placera frysexen på en jämn, torr och välventilerad plats. Installera medföljande tillbehör.

Elektrisk anslutning

Din enhet är avsedd att användas med enfassspänning på 220-240V/50 Hz. Innan enheten installeras, se till att ditt hus huvudström (spänning, typ av ström, frekvens) överensstämmer med din enhets specifikation.

- Informationen gällande spänning och strömförbrukning ges på etiketten på höger baksida längs ner.
- Den elektriska installationen måste följa bestämmelserna.

Jordning av enheten är obligatorisk. Tillverkaren har inget ansvar vid skador av personer, djur eller gods som kan uppstå om inte angivna villkor efterföljs.

- Frysexen är utrustad med en strömkabel och en kontakt (europeisk typ märkt 10/16A) med dubbeljordad kontakt för din säkerhet. Om uttaget inte är samma typ som kontakten var vänlig be en behörig elektriker att byta ut den.
- Använd inte förlängningskabel eller förgreningsadapter.

Stänga av

Avstängning måste vara möjlig med att dra ur kontakten ur väggen eller genom en huvudbrytare placerad vid uttaget.

Drift

Innan den används skall enhetens insida rengöras (se kapitel "Rengöring"). Efter att detta är klart skall enheten kopplas i väggen och termostatvredet justeras till mittenposition. Den gröna och den röda LED-lampan i kontrollfältet måste lysa. Låt frysboxen stå påslagen i cirka 2 timmar innan du lägger in mat. Nedfrysning av färsk mat är möjlig efter minst 18 timmars drift.

Enhetsbeskrivning

(Bild 1)

- 1 - Lock
- 2 - Korg för snabbinfrysning
- 3 - Termostatenhet

Frysens funktioner

Temperaturjustering

Frysens temperatur justeras via vredet på termostaten (Bild 4), med "MAX" som den lägsta temperaturen.

Uppnådda temperaturer kan variera efter enhetens driftsförhållanden som till exempel: Enhetens placering, omgivande temperatur, dörröppningsfrekvens, hur mycket mat som fylls i frysen. Termostatvredets placering ändras efter dessa faktorer. Normalt sett, vid en omgivande temperatur på cirka 25 °C, kommer termostaten justeras till en mittenposition.

Signalssystemet finns på frysens framsida (Bild 5).

Det inkluderar:

1. Termostatvred – den invändiga temperaturen justeras.
2. Grön LED - visar att enheten får ström.
3. Röd LED - skada - tänds om temperaturen i frysen är för hög. LED-lampan tänds i 15-45 minuter efter att enheten kopplats in, sedan måste den släckas. Om LED-lampan tänds under drift, betyder det att fel uppstått.

De tre LED-lamporna: grön, röd och gul visar frysens driftsläge.

Råd vid förvarning av mat

Frysboxen är avsedd att förvara fryst mat under en lång tid och också för att frysa in färsk mat.

Det viktigaste för en lyckad infrysning är paketeringen.

Huvudvillkoren som paketeringen måste uppfylla är följande. Lufttät, hålla den paketerade maten på plats, motstå låga temperaturer, tät för vätskor, olja, vattenånga, lukt och möjlig att diska.

Dessa villkor uppfylls av följande typer av paketering: Plast eller aluminiumfilm, plast eller aluminiumbehållare, vaxade pappersformar eller plastformar.

VIKTIGT!

- För att kunna frysa in färsk mat bör medföljande korg användas.
- Placera inte för mycket mat i frysen samtidigt. Matens kvalitet hålls bäst om den snabbt blir djupfrost. Det är därför man inte bör överskrida infrysningskapaciteten för frysboxen angivet i "PRODUKTBLAD".
- Den färska maten skall inte vidröra den mat som redan är frusen.
- Den redan frysta maten du köpt kan placeras i frysen utan att du behöver justera termostaten.
- Den period du kan förvara den frysta maten kan ses på frysen dörrfoder. Om frysdatum inte nämns på förpackningen, så använd en period av maximalt 3 månader som en generell regel.
- Mat som tinats även delvis kan inte frysas om, den måste ätas upp omedelbart eller tillagas och sedan frysas om.
- Kolsyrade drycker skall inte förvaras i frysen.
- Vid strömavbrott skall inte enhetens dörr öppnas. Den frusna maten påverkas inte om avbrottet pågår mindre än 30 timmar.

Avfrostning av frysboxen

- Vi råder dig att frosta av frysen minst två gånger per år eller när islagret är för tjockt.
 - Is som byggs på är ett normalt fenomen.
 - Isens mängd och hur snabbt den byggs upp beror på omgivande förhållanden och hur ofta dörren öppnas.
 - Vi råder dig att avfrostas enheten när du har liten mängd infrostat mat.
 - Innan avfrostning skall termostatvredet justeras till ett högre läge så att maten lagras kallare.
- Koppla från enheten.
- Ta ut den frysta maten, vira in den i flera tidningspapper och lägg den på en kall plats. Använd inga vassa metallobjekt för att få bort isen.

Använd inte hårtorkar eller annan elektrisk värmeutrustning för att frosta av.

Invändig rengöring

Innan du börjar göra rent, kopplar du ur enheten från huvudströmmen.

- Du bör rengöra enheten när du frostar av den.
- Tvätta invändigt med ljummet vatten och ett mildt rengöringsmedel. Använd inte tvål, rengöringsmedel, bensin eller aceton som kan ge en stark lukt.
- Tvätta med en våt svamp och torka med en mjuk trasa.
- Undvik att använda för mycket vatten för att förhindra intrång av vatten i enhetens termoisolering, vilket bildar en oönskad lukt.
- Glöm inte att rengöra dörrens packning, speciellt under kanten, med en ren trasa.

Utvändig rengöring

- Rengör frysboxen utvändigt med en svamp uppblött i varmt vatten med såpa, torka med en mjuk trasa.
- Rengöring av kylningskretsens utvändiga del (motorkompressor, kondensator, anslutningsrör) skall göras med en mjuk borste eller med dammsugaren. Se till att inte skada rören eller koppla från kabeln.
- Använd inte skrub- eller slipmedel!
Efter rengöring återplaceras du tillbehören och kopplar in frysboxen.

Felsökningsguide

Enheten fungerar inte.

- Det är strömavbrott.
- Strömkabelns kontakt är inte inkopplad i uttaget.
- Säkringen har gått.
- Termostaten står i läge "OFF".
- **Temperaturerna är inte tillräckligt låga** (röd LED lyser).
- Maten hindrar att dörren stängs.
- Enheten är inte korrekt placerad.
- Enheten är placerad för nära en värmekälla.
- Termostatvredet är inte i rätt position.

För mycket is har byggt upp

- Dörren stängdes inte helt.


Följande är inget fel

Smäll och brak hörs från enheten: Kylmedlet cirkulerar i systemet.

Varning !

Försök aldrig själv reparera enheten eller dess elektriska komponenter. Reparation som gjorts av en icke auktoriserad person är farlig för användaren och kan resultera i att garantin inte gäller.



Symbolen  på produkten eller förpackningen indikerar att den här produkten inte kan kastas med hushållsavfallet. Den ska i stället lämnas på speciella insamlingsställen för återvinning av elektriskt och elektroniskt avfall. Genom att säkerställa att produkten avyttras på rätt sätt bidrar du till att förhindra potentiella, negativa konsekvenser för miljön och den mänskliga hälsan. Annars kan avfallshanteringen bli felaktig för produkten. Om du vill ha mer detaljerad information om återvinning av den här produkten ska du kontakta din kommun, renhållningsbolaget eller den butik där du inhandlade produkten.

Advice for recycling of the old appliance /1
Packing Recycling /2
Transport instructions /2
Warnings and special advice /2
Setting up /3
Electric connection /3
Switching off /4
Appliance description /4
Freezer operation /4
Advice for food conservation /5
Defrosting of the appliance /6
Cleaning of the appliance /6
Defects finding guide /7

WARNING!

In order to ensure a normal operation of your refrigerating appliance, which uses a completely environmentally friendly refrigerant the R600a (flammable only under certain conditions) you must observe the following rules:

- ♦ Do not hinder the free circulation of the air around the appliance.
- ♦ Do not use mechanical devices in order to accelerate the defrosting, others than the ones recommended by the manufacturer.
- ♦ Do not destroy the refrigerating circuit.
- ♦ Do not use electric appliances inside the food keeping compartment, other than those that might have been recommended by the manufacturer.

Congratulations for your choice!

The chest freezer you have purchased is one in the Cylinda products range and represents a harmonious joining between the refrigeration technique with the aestetical outlook. It has a new and attractive design and is built according to the European and national standards which guarantee its operation and safety features. At the same time, the used refrigerant, R600a, is environment-friendly and it does not affect the ozone layer.

In order to use the best your freezer, we advise you to read carefully the information in these user instructions.

Advice for recycling your old appliance

If your newly purchased appliance replaces an older appliance, you must consider a few aspects.

The old appliances are not valueless scrap. Their disposal, while preserving the environment, allows the recovery of important raw materials.

Make your old appliance useless :

- disconnect the appliance from the supply;
- remove the supply cord (cut it);
- remove the eventual locks on the door to avoid the blocking of children inside, while playing, and the endangering of their lives.

The refrigerating appliances contain insulating materials and refrigerants which require a proper recycling.

This appliance is not intended for use by person with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Packing Recycling

WARNING!

Do not allow children to play with the packing or with parts of it. There is the risk of suffocation with parts of corrugated cardboard and with plastic film.

In order to get to you in good condition, the appliance was protected with a suitable packing. All the materials of the packing are compatible with the environment and recyclable. Please help us recycle the packing while protecting the environment !

IMPORTANT!

Before putting the appliance in operation, read carefully and entirely these instructions. They contain important information concerning the setting up, use and maintenance of the appliance.

The manufacturer is free of any responsibility if the information in this document are not observed. Keep the instructions in a safe place in order to reach them easily in case of need. They can also be useful subsequently by another user.

ATTENTION!

This appliance must be used only for its intended purpose, (household use), in suitable areas, far from rain, moisture or other weather conditions.

Transport instructions

The appliance must be transported, as much as possible, only in vertical position. The packing must be in perfect condition during transport.

If during transport the appliance was put in horizontal position (only according to the markings on the packing), it is advised that, before putting it into operation, the appliance is left to rest for 4 hours in order to allow the settling of the refrigerating circuit.

The failure to observe these instructions can cause the breakdown of the motorcompressor and the cancellation of its warranty.

Warnings and general advice

- Do not plug in the appliance if you noticed a failure.
- The repairs must be done only by qualified personnel.
- In the following situations please unplug the appliance from the mains:
 - when you defrost completely the appliance;
 - when you clean the appliance.

To unplug the appliance, pull by the plug, not by the cable!

- Ensure the minimum space between the appliance and the wall against which it is placed.
- Do not climb on the appliance.
- Do not allow the children to play or hide inside the appliance.
- Never use electric appliances inside the freezer, for defrosting.
- Do not use the appliance near heating appliances, cookers or other sources of heat and fire.
- Do not leave the freezer door open more than it is necessary to put in or take out the food.
- Do not leave the food in the appliance if it is not working.
- Do not keep inside products containing flammable or explosive gases.
- Do not keep inside fizzy drinks (juice, mineral water, champagne, etc.) in the freezer: the bottle can explode! Do not freeze drinks in plastic bottles.
- Do not eat ice cubes or icecream immediately after having taken them out of the freezer because they may cause „freezer burns“.
- Never touch cold metal parts or frozen food with wet hands because your hands can quickly freeze on the very cold surfaces.

- If you do not use your appliance for a few days, it is not advisable to switch it off. If you do not use it for a longer period, please proceed as follows :
 - unplug the appliance;
 - empty the freezer;
 - defrost it and clean it;
 - leave the door open to avoid the formation of unpleasant smells.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If your appliance has a lock, keep it locked and store the key in a safe place, out of the reach of children. If you are discarding an appliance with lock, make sure that, is made ineffective. This is very important so as to avoid children being trapped inside, which may cause their loss of life.

Setting up

Your product can operate in ambient temperatures between -15°C to $+43^{\circ}\text{C}$. If the ambient temperature is above $+43^{\circ}\text{C}$, inside the appliance the temperature can increase.

Set up the appliance far from any source of heat and fire. Placing it in a warm room, the direct exposure to sunbeams or near a heat source (heaters, cookers, ovens), will increase the energy consumption and shorten the product life.

- Please observe the following minimum distances:
 - 100 cm from the cookers working with coal or oil;
 - 150 cm from the electric and gas cookers.
 - Ensure the free circulation of the air around the appliance, by observing the distances shown in Item 2.
- Assemble on the condenser (in the rear side) the supplied spacers. (Item 3).
- Place the appliance in a perfectly even, dry and well ventilated place.
- Assemble the supplied accessories.

Electric connection

Your appliance is intended to operate at a single-phase voltage of 230V/50 Hz. Before plugging in the appliance, please make sure that the parameters of the mains in your house (voltage, current type, frequency) comply to the operation parameters of the appliance.

- The information concerning the supply voltage and the absorbed power is given on the marking label placed in the back side of the freezer.
- The electric installation must comply with the law requirements.
- **The earthing of the appliance is compulsory. The manufacturer has no responsibility for any damage to persons, animals or goods which may arise from the failure to observe the specified conditions.**
- The appliance is endowed with a supply cord and a plug (European type, marked 10/16A) with double earthing contact for safety. If the socket is not the same type with the plug, please ask a specialised electrician to change it.
- Do not use extension pieces or multiple adapters.

Switching off

The switching off must be possible by taking the plug out of the socket or by means of a mains two-poles switch placed before the socket.

Operation

Before putting into operation, clean the inside of the appliance (see chapter „Cleaning“). After finishing this operation please plug in the appliance, adjust the thermostat knob to an average position. The green and red LEDs in the signalling block must light. Leave the appliance work for about 2 hours without putting food inside it. The freezing of the fresh food is possible after min. 20 hours of operation.

Appliance description

(Item. 1)

1. Door
2. Basket
3. Thermostat box

Freezer operation

Temperature adjustment

The temperature of the freezer is adjusted by means of the knob assembled on the thermostat (item. 4), position „MAX“ being the lowest temperature.

The achieved temperatures can vary according to the conditions of use of the appliance, such as: place of the appliance, ambient temperature, frequency of door opening, extent of filling with food of the freezer. The position of the thermostat knob will change according to these factors. Normally, for an ambient temperature of approx. 32⁰C, the thermostat will be adjusted on an average position.

The signalling system is placed on the back side of the freezer (Item 5).

It includes:

1. Thermostat adjustment knob – the inside temperature is adjusted.
2. green LED – shows that the appliance is supplied with electric energy.
3. red LED – damage – lights if the temperature in the freezer is too high. The LED will operate 15-45 minutes after the putting into operation of the freezer, then it must go off. If the LED goes on during the operation, this means that defects have occurred.

The three LEDs give information about the mode of operation of the freezer.

Advice for food conservation

The freezer is intended to keep the frozen food for a long time, as well as to freeze fresh food.

One of the main elements for a successful food freezing is the packing.

The main conditions that the packing must fulfill are the following: to be airtight, to be inert towards the packed food, to resist to low temperatures, to be proof to liquids, grease, water vapours, smells, to be able to be washed.

These conditions are fulfilled by the following types of packings: plastic or aluminium film, plastic and aluminium vessels, waxed cardboard glasses or plastic glasses.

IMPORTANT!

- For freezing the fresh food please use the supplied baskets of the appliance.
- Do not place into the freezer a too large quantity of food at a time. The quality of the food is best kept if they are deeply frozen as quickly as possible. This is why it is advisable not to exceed the freezing capacity of the appliance specified in the "Product Fiche".
- The fresh food must not come into contact with the food already frozen.
- The frozen food you have bought can be placed into the freezer without having to adjust the thermostat.
- If the freezing date is not mentioned on the packing, please take into consideration a period of max. 3 months, as a general guide.
- The food, even partially defrosted, cannot be frozen again, it must be consumed immediately or cooked and then refrozen.
- The fizzy drinks will not be kept in the freezer.
- In case of a power failure, do not open the door of the appliance. The frozen food will not be affected if the failure lasts less than 30 hours.

Defrosting of the appliance

- We advise you to defrost the freezer at least twice a year or when the ice layer has an excessive thickness.
 - The ice build-up is a normal phenomenon.
 - The quantity and the rapidity of ice build-up depends on the ambient conditions and on the frequency of the door opening.
 - We advise you to defrost the appliance when the quantity of frozen food is the least.
 - Before defrosting, adjust the thermostat knob to a higher position so that the food stores more cold.
- Unplug the appliance.
- Take out the frozen food, wrap it in several sheets of paper and put them in refrigerator or a cool place.
For a fast thaw please leave the door open.

Do not use sharp metal objects to remove the ice.

Do not use hairdriers or other electric heating appliances for defrosting.

Inside cleaning

Before starting the cleaning, unplug the appliance from the mains.

- It is advisable to clean the appliance when you defrost it.
- Wash the inside with lukewarm water where you add some neutral detergent. Do not use soap, detergent, gasoline or acetone which can leave a strong odour.
- Wipe with a wet sponge and dry with a soft cloth.

During this operation, avoid the excess of water, in order to prevent its entrance into the thermal insulation of the appliance, which would cause unpleasant odours.

Do not forget to clean also the door gasket especially the bellow ribs, by means of a clean cloth.

Outside cleaning

- Clean the outside of the freezer by means of a sponge soaked in soapy warm water, wipe with a soft cloth and dry.
- The cleaning of the outside part of the refrigerating circuit (motorcompressor, condenser, connection tubes) will be done with a soft brush or with the vacuum-cleaner. During this operation, please take care not to distort the tubes or detach the cables.

Do not use scouring or abrasive materials !

- After having finished the cleaning, replace the accessories at their places and plug in the appliance.

Defects finding guide

The appliance does not work.

- There is a power failure.
- The plug of the supply cord is not inserted well into the socket.
- The fuse is blown.
- The thermostat is in „OFF” position.

The temperatures are not low enough (red LED on).

- The food prevents the door closing.
- The appliance was not placed correctly.
- The appliance is placed too close to a heat source.
- The thermostat knob is not in the correct position.

Excessive ice build-up

- The door was not closed properly.


The following are not defects

- Possible noddings and cracks coming from the product: circulation of the refrigerant in the system.

Warning !

Never try to repair yourself the appliance or its electric components. Any repair made by an unauthorised person is dangerous for the user and can result in the warranty cancellation.



The symbol  on the product or on packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



service uppge

- Vi har service i hela landet / Nationwide service
- Gå in på www.cylinda.se / Visit www.cylinda.se
- Ring 0771-25 25 00 (endast lokaltaxa) / Call 0771-25 25 00

- Maskintyp / Model code
- Serienummer / Serial number
- Inköpsdatum / Purchase date

- Problembeskrivning / Problem description
- Namn och adress / Name and address
- Ditt telefonnummer / Phone number