

TVÄTTGUIDE

Cylinda
är efter är

PT7140S, PT7140P

1 Sortera plaggen.

Stäng dragkedjor.

Töm fickorna och vänd dem ut och in.

Observera tvättsymbolerna.

Sortera tvätten efter färg, material och hur smutsig den är.



2 Slå på strömbrytaren (ON/OFF)


3 Öppna tvättmaskinens lucka och lägg in tvätten.

Se till att trumman är tom innan du gör detta.

4 Tillsätt tvättmedel och sköjmedel.

Rekommenderad mängd tvättmedel anges vanligtvis på tvättmedelsförpackningen.

Använd en mindre mängd tvättmedel för mindre tvätt.

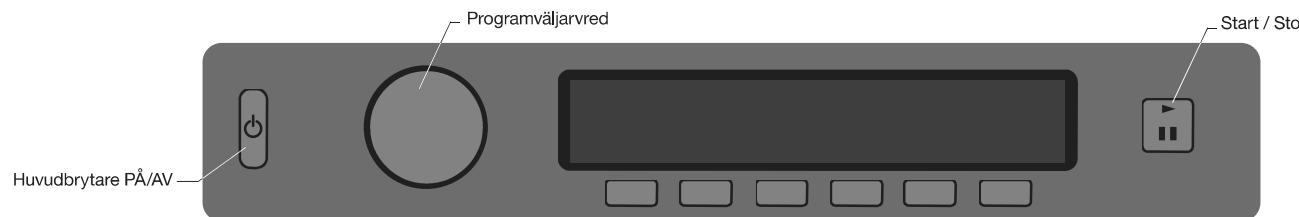

5 Välj tvättprogram.

Vrid programväljarvredet till önskat tvättprogram.

Valt program indikeras på displayen.

Max. last är 6 kg (se programtabellen i bruksanvisningen).

6 Välj programinställning.

Programinställningar kan endast göras för vissa program.
Se kapitlet: INSTÄLLNINGAR (endast ägaren/distributören av apparaten får ändra inställningarna).

7 Stäng tvättmaskinsluckan och tryck på knappen "START".

Förväntad tvätttid, i timmar och minuter, visas på displayen.

8 Programslut

Öppna luckan och ta ut tvätten ur tvättmaskinen.

Se kapitlet "RENGÖRING OCH UNDERHÅLL".

Stäng luckan.

Slå av strömbrytaren.

Stäng av vattenkranen och dra ur kontakten ur eluttaget.

Feldisplay

Om ett fel visas på displayen, se kapitlet FEL ... VAD GÖR JAG ...?

Säkerhetsföreskrifter

Använd endast tvättmedel som är avsett för maskintvätt.

Håll ett öga på barn för att säkerställa att de inte leker med tvättmaskinen.

Rengör inte tvättmaskinen med vatten medan den är igång.

OBSERVERA: Var försiktig när du tar ut tvätten ur maskinen, eftersom den kan vara varm.

WASHING GUIDE

Cylinda
är efter är

PT7140S, PT7140P

1 Sort the laundry.

Close the zippers.

Empty the pockets and turn them inside out.

Check the laundry care symbols.

Sort the laundry based on how heavily soiled it is, by colour, and by material.



2 Switch on the main ON/OFF switch (ON/OFF)

3

Open the washing machine door and insert the laundry.


Before doing so, make sure the drum is empty.

4


Add the detergent and the conditioner.

Recommended detergent amount is usually indicated on the packaging.

For smaller wash loads, use a smaller amount of detergent.

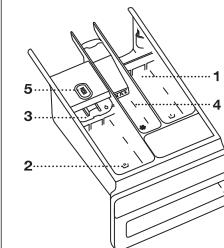

- 1. Prewash compartment
- 2. Compartment for main wash liquid detergent.
Use the foldable barrier (3).
- 3. Compartment for main wash powder detergent.
Do not use the foldable barrier (3).
- 4. Softener / conditioner compartment
- 5. Tab for detergent compartment removal

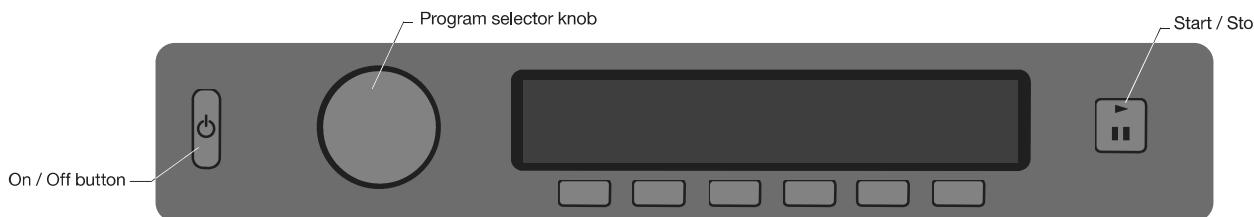

5 Choose the washing program.

Turn the program selector knob to the desired washing program.
Selected program will be indicated on the display unit.
Max. the load is 6 kg (see the Program table in the instructions for use).

6 Choose the program setting.

Program settings can only be set for certain programs.
See chapter: SETTINGS (only appliance owner/distributor may change the settings).

7 Close the washing machine door and press the "START" button.

Anticipated washing time, in hours and minutes, will be indicated on the display.

8 End of program

Open the door and remove the laundry from the washing machine.
See chapter "CLEANING AND MAINTENANCE".
Close the door.
Switch off the main on/off switch.
Close the water tap and remove the power plug from the power socket.

Error display

If an error appears on the display unit, see chapter ERRORS ... WHAT TO DO ...?

Safety precautions

- - Only use detergents intended solely for machine washing of laundry.
- ! Keep an eye on children to make sure they do not play with the washing machine.
- ⚡ Do not clean the washing machine with water during operation.
- ⚠ ATTENTION: Be careful when taking the laundry out of the washing machine, as it could be hot.